


XHANTI HOME ORGANIZER

MUEBLE XHANTI


Installation ideas · Ideas de modulaciones

Adjustable from 36.2 in to 5.91 ft · Ajustable a espacios de 92 cm a 1.8 m

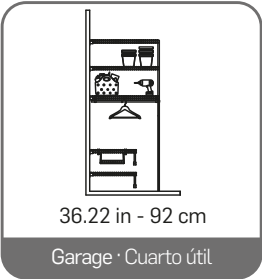


36.22 in - 92 cm

Garage · Cuarto útil

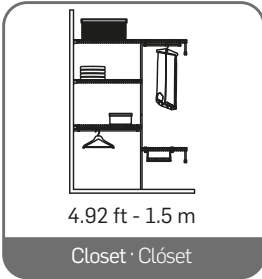

4.92 ft - 1.5 m

Closet · Clóset

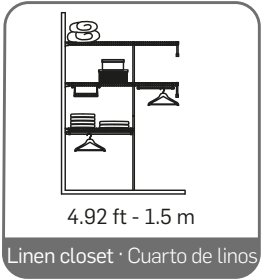

4.92 ft - 1.5 m

Linen closet · Cuarto de linos




15.91 ft - 1.8 m


Laundry · Zona de ropas



All accessories are included · Todos los accesorios están incluidos

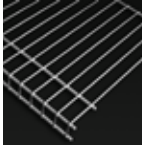

2 Shelves 15.7 x 23.6 in
2 Entrepaños
40x60 cm

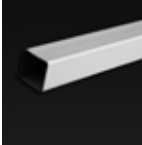

2 Poles 39.4 in
2 Parales
100 cm



18 Wall clips
18 Chazos jota



7 Joiner plates
7 Pares de
escudos



18 Screws for anchors
18 Tornillos
chazo 8x1



17 Anchors 1/4"
17 Chazos de
1/4"



5 Wall brackets
5 Soportes
laterales




1 Supercloset basket
1 Canasta
superclóset



3 Tornillos con
tuercas
3 Screws with nuts



12 Screws 8x1
12 Tornillos
8x1

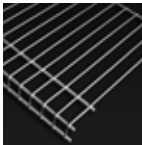

3 Shelves
15.7 x 35.4 in
3 Entrepaños
40x90 cm



1 Pole
connectors
1 Unión paral



2 Poles end caps
2 Tapones paral



12 End caps
12 Topes




4 Shelf rail
adapter
4 Adaptadores riel




2 Plastic rails
2 Rieles plásticos



4 Closet rod
supports
4 Soportes para
tubo

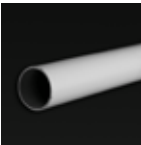

1 Closet tubes
35.4in
1 Tubos 90 cm

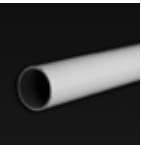


1 Closet tube
19.7in
1 Tubo 50 cm




3 Support
brackets 15.7 in
3 Soportes
diagonales 40 cm

It's time to work on your projects! · ¡Es tiempo para desarrollar tus proyectos!



Required tools Herramientas necesarias


STEP / PASO 1

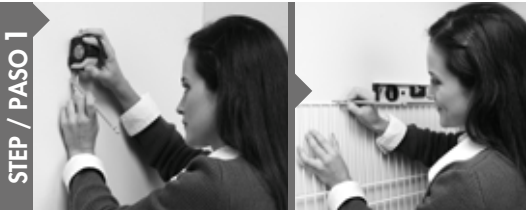

Shelves: Mark out height, level shelves and mark the holes where the "wall clips" will be installed (mark every 11.8 in, starting 1.18 in from the shelf corner).

Entrepaños: Trace las alturas, nivele y marque cada 30 cm aprox iniciando a 3 cm de la esquina.

PASO / STEP 3

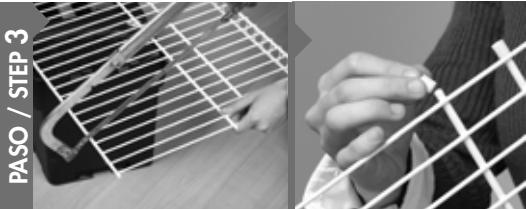

If necessary cut the shelf, cover the ends with the corresponding "ends caps".

Si es necesario corte los entrepaños y coloque "topes" plásticos.


PASO / STEP 6



Snap in place the shelf front between "joiner plates" attach "support bracket" with screw and nut. Level and lower end to "wall clip" and "screw".

Haga sánduche con los "escudos", fije el "soporte diagonal" al entrepaño, con tornillo y tuerca. Nivele y fije a la pared con chazo y tornillo.

STEP / PASO 2

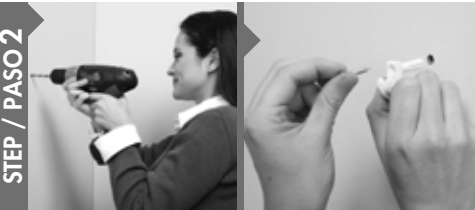

Drill each hole in the wall with a 1/4" drill bit. Insert a "wall clip" and then the "screw pin".

Perfore la pared con broca para muro de 1/4". Introduzca un "chazo J" y colóquelo un "clavo roscado".


PASO / STEP 4



Set the back of the shelving into the "wall clips" and press down until it locks in place.

Instale los entrepaños, haciendo presión sobre los "chazos J".

PASO / STEP 5

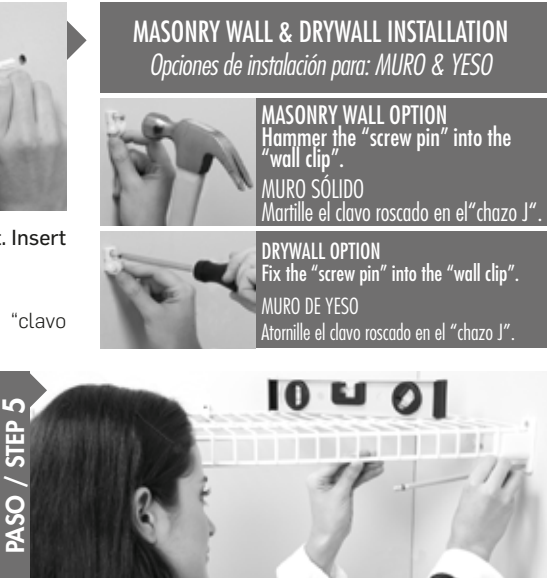

Place a "wall bracket" on the shelf's front, level it, mark the holes and drill with drill bit 1/4", insert a wall clip into each hole and screw them.


Ubique el "soporte lateral" en el entrepaño, nivele y marque los orificios del soporte, perfore con broca 1/4" y fije con chazos y tornillos.

PASO / STEP 7



Snap in place the shelf front between the "joiner plates". Level and drill the pole with drill bit 1/8". Set it with screw.

Haga sánduche con los "escudos", nivele y perfore el paral con broca para metal de 1/8". Fije con tornillo.

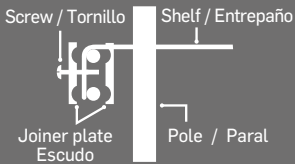


Supercloset's basket install / Instalación Canasta súperclóset



Bend only once / Dobla cada lado solo una vez

Install the Closet rod / Instala el Tubo colgadero

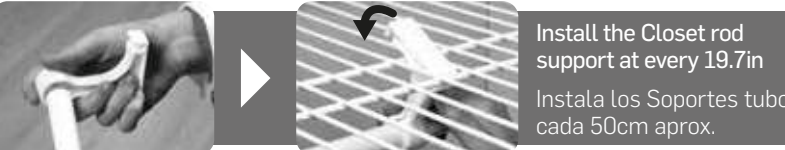

Install the Closet rod support at every 19.7in
Instala los Soportes tubo cada 50cm aprox.